



#### **Features and Benefits**

- ☐ Small size, low cost 16x4 pixels IR array
- Easy to integrate
- ☐ Industry standard four lead TO-39 package
- ☐ Factory calibrated infrared temperature measurement.
  - Calibration parameters stored in EEPROM.
- □ NETD (Noise Equivalent Temperature Difference) <0.25K RMS@4Hz refresh rate
- ☐ I<sup>2</sup>C compatible digital interface
- ☐ Programmable frame rate 0.5Hz...64Hz
- ☐ 2.6V supply voltage
- ☐ Current consumption less than 9mA
- Measurement start trigger for synchronization with external control unit
- 2 FOV options
- ☐ T<sub>a</sub> -40 to 85°C
- ☐ T<sub>o</sub> -50 to 300°C
- □ Complies with RoHS regulations


#### **Applications Examples**

- High precision non-contact temperature measurements:
- ☐ Temperature sensing element for residential, commercial and industrial building air conditioning;
- Microwave ovens
- ☐ Home appliances with temperature control;
- ☐ Thermal Comfort sensor in automotive Air Conditioning control system;
- Passenger classification
- Automotive blind spot detection;
- Industrial temperature control of moving parts;
- ☐ Identifying thermal leaks in homes
- □ Thermal scanners
- Security / safety gates
- Intrusion / Movement detection and Imaging

#### **Ordering Information**

Part No.	Temperature Code	Package Code	Option Code	Packing Form
MLX90620	E (-40°C to 85°C)	SF (TO-39)	X X X (1) (2) (3)	Tube
(1) Supply Vo B = 3V	ltage (2) Number A = 16X4	of thermopiles:	(3) Package opti A = reserved B = 60° FOV C = reserved D = 40° FOV	ions:
Example: MLX90620ES	F-BAB-000-TU			

### Functional diagram

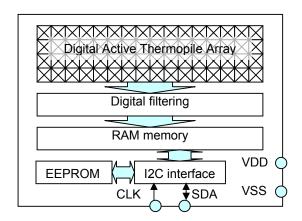

### General Description

The MLX90620 is a fully calibrated 16x4 pixels IR array in an industry standard 4-lead TO-39 package. It contains 2 chips in one package: the IR array with signal conditioning electronics) and the 24AA02 (256x8 EEPROM) chip.

The MLX90620 contains 64 IR pixels with dedicated low noise chopper stabilized amplifier and fast, integrated ADC. A PTAT (Proportional To Absolute Temperature) sensor is integrated to measure the ambient temperature of the chip. The outputs of both IR and PTAT sensors are stored in internal RAM and are accessible through I<sup>2</sup>C.





#### General Description (continued)

The results of the infrared sensor measurements are stored in RAM:

- 16-bit result of IR measurement for each individual sensor (64 words)
- 16-bit result of PTAT sensor

Depending on the application, the external microcontroller can read the different RAM data and, based on the calibration data stored in the EEPROM memory, compensate for differences between sensors to build up a thermal image, or calculate the temperature at each spot of the imaged scene.

These constants are accessible by an external microcontroller through the I2C bus and have to be used for external post processing of the thermal data. This post processing includes:

- T<sub>a</sub> calculation
- Pixel offset cancelling
- · Pixel to pixel sensitivity difference compensation
- · Object emissivity compensation
- Object temperature calculation

The result is an image with NETD better than 0.5K at 1Hz refresh rate.

The refresh rate of the array is programmable by means of register settings or directly via I2C command. Changes to the refresh rate have a direct impact on the integration time and noise bandwidth (faster refresh rate means higher noise level). The frame rate is programmable in the range 0,5Hz...64Hz and can be changed to achieve the desired trade off between speed and accuracy.

The MLX90620 requires a single 3V supply (±0.6V).

The customer can choose between 3 operating modes:

- <u>Normal</u>. In this mode the device is free running under control of the internal state machine. Depending on the selected refresh rate Fps (Frames per second) the chip is constantly measuring both IR and PTAT and is refreshing the data in the RAM with specified refresh rate.
- <u>Step</u>. This mode is foreseen for synchronization with an external micro-controller. The internal state machine is halted. If the command 'StartMeas' is received via the I<sup>2</sup>C bus, a single measurement of all IR and PTAT sensors will be done, then the chip will return to wait state. When in wait state the data in RAM can be read.

The MLX90620 is factory calibrated in wide temperature ranges:

- -40...85 °C for the ambient temperature sensor
- -50...300 °C for the object temperature.

Each pixel of the array measures the average temperature of all objects in its own Field Of View (called nFOV).

It is very important for the application designer to understand that the accuracy of the temperature measurement is very sensitive to the thermal equilibrium isothermal conditions (there are no temperature differences across the sensor package). The accuracy of the thermometer can be influenced by temperature differences in the package induced by causes like (among others): Hot electronics behind the sensor, heaters/coolers behind or beside the sensor or by a hot/cold object very close to the sensor that not only heats the sensing element in the thermometer but also the thermometer package.

This effect is especially relevant for thermometers with a small FOV as the energy received by the sensor from the object is reduced





### 1 Table of contents

Table of contents	
! Glossary of terms	
Absolute Maximum ratings	
Pin definition and description	6
Electrical characteristics	
Block diagram	
Principle of operation	
7.1 Initialization	
7.1.1 Reading configuration	
7.2 Measuring	
7.3 Read measurement data	
7.3.1 PTAT data read	
7.3.2 IR data read	
7.4 Calculation	
7.4.1 Calculation of absolute chip temperature T <sub>a</sub> (sensor temperature)	
7.4.2 Example for T <sub>a</sub> calculations	14
7.4.4 Example for T <sub>o</sub> calculations	
B Detailed description, Block description	
8.1 Pixel position	
8.2 MLX90620 address map	
8.2.1 RAM	
8.2.2 Internal registers	
8.2.2.1 Configuration register (0x92)	
8.2.2.2 Trimming register (0x93)	
8.2.3 EEPROM	
8.3 POR	
8.4 ESD	
Communication protocol	
9.1 Communication pins	
9.2 Low level communication protocol	
9.2.1 Start / Stop condition	
9.2.2 Device addressing	26
9.2.3 Acknowledge	26
9.2.4 Low level communication operation	26
9.3 Device modes	27
9.3.1 Normal mode	27
9.3.2 Step mode	27
9.4 Communication to IR array	28
9.4.1 Start measurement command	28
9.4.2 Read command	28
9.4.3 Write configuration register command	29
9.4.4 Write trimming command	29
9.5 Communication to EEPROM	30
0 Performance Graphs	
10.1 Temperature accuracy of the MLX90620	
10.2 Field Of View (FOV)	
1 Applications Information	
11.1 Use of the MLX90620 thermometer in SMBus configuration	33
2 Application Comments	
3 Standard information regarding manufacturability of Melexis products with different soldering process	
4 ESD Precautions	



# MLX90620

# 16x4 IR array

15 FAQ	36
16 Mechanical specification	
16.1 Package outline	
17 References	
18 Disclaimer	30



# 2 Glossary of terms

POR	Power On Reset
PTAT	Proportional To Absolute Temperature sensor (package temperature)
IR	Infra Red
IR_data	Infrared data (raw data from ADC proportional to IR energy received by the sensor)
ADC	Analog To Digital Converter
Ta	Ambient Temperature measured from the chip – (the package temperature)
To	Object Temperature, 'seen' from IR sensor
TGC	Temperature Gradient Coefficient
FOV	Field Of View
ESD	Electro-Static Discharge
EMC	Electro-Magnetic Compatibility
I <sup>2</sup> C	Inter-Integrated Circuit communication protocol
SDA	Serial Data
SCL	Serial Clock
DSP	Digital Signal Processing
HFO	High Frequency Oscillator (RC type)
FpS	Frames per Second – data refresh rate
MD	Master Device
SD	Slave Device
TBD	To Be Defined
NA	Not Applicable

Table 1 Glossary of terms

## 3 Absolute Maximum ratings

Parameter	MLX90620
Supply Voltage, V <sub>DD</sub> (over voltage)	5V
Supply Voltage, V <sub>DD</sub> (operating max)	3.6V
Reverse Voltage (each pin)	-0.3 V
Operating Temperature Range, T <sub>A</sub>	-40+85°C
Storage Temperature Range, T <sub>S</sub>	-40+125°C
ESD Sensitivity (AEC Q100 002)	2kV
DC sink current, SDA	25 mA
DC source current, SDA	NA
DC clamp current, SDA	NA
DC source current, SCL	NA (input only)
DC clamp current, SCL	NA

Table 2 Absolute maximum ratings for MLX90620

Exceeding the absolute maximum ratings may cause permanent damage. Exposure to absolute-maximum-rated conditions for extended periods may affect device reliability.





# 4 Pin definition and description

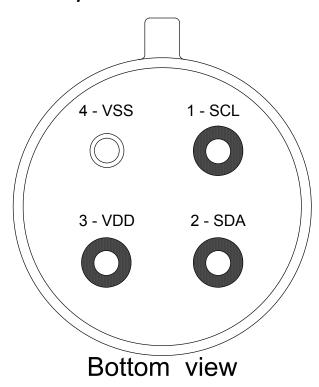


Figure 1 Pin description

Pin Name Function		
SCL	SCL Serial clock input for 2 wire communications protocol	
SDA Digital input / output 2 wire communications protocol.		
VDD External supply voltage		
VSS Ground (case)		

Table 3 Pin description for MLX90620



#### 5 Electrical characteristics

All parameters are preliminary for T<sub>A</sub> = 25°C, V<sub>DD</sub> =2.6V (unless otherwise specified)

Parameter	parameters are preliminary for T <sub>A</sub> = 25°C, V <sub>DD</sub> =2.6V (unless otherwise specified)    Parameter					Units
Farameter	Symbol Test Conditions		IVIIII	Тур	IVIAX	Ullis
		Supplies				
External supply V <sub>DD</sub>		Саррнез	2.5	2.6	2.7	V
Supply current	I <sub>DD</sub>	No load	2.0	5	7	mA
очррту очтот	100	Power On Reset		<u> </u>	,	1117 (
DOD I			0	0.0	0.4	> /
POR level	$V_{POR\_up}$	Power-up (full temp range)	2	2.2	2.4	V
POR level	$V_{POR\_down}$	Power –down (full temp range)	1.9	2.1	2.3	V
POR hysteresis	$V_{POR\_hys}$	Full temp range		0.1		V
V <sub>DD</sub> rise time (10% to 90% of specified supply voltage)	$T_POR$	Ensure POR signal	100			μs
	I <sup>2</sup> C co	mpatible 2-wire interface Sensor	chip			
Slave address	SA	Factory default		60		hex
Input high voltage	$V_{IH}\left(T_{a},V\right)$	Over temperature and supply	0.7VDD			V
Input low voltage	$V_{IL}\left(T_{a},V\right)$	Over temperature and supply			0.3VDD	V
Output low voltage	$V_{OL}$	SDA over temperature and supply, Isink = 6mA (FM mode)			0.6	V
Output low voltage	V <sub>OL</sub>	SDA over temperature and supply, Isink = 20mA (FM+ mode)			0.4	٧
SCL leakage	I <sub>SCL</sub> , leak	V <sub>SCL</sub> =4V, T <sub>a</sub> =+85°C			2	μΑ
SDA leakage	I <sub>SDA</sub> , leak	V <sub>SDA</sub> =4V, T <sub>a</sub> =+85°C			2	μA
SCL capacitance	C <sub>SCL</sub>	Two dies MLX90670 + EEPROM			20	pF
I <sup>2</sup> C clock frequency	SCL <sub>IR</sub>	MLX90620			1	MHz
Acknowledge setup time	Tsuac(MD)	8-th SCL falling edge, Master			0.45	μs
Acknowledge hold time	Thdac(MD)	9-th SCL falling edge, Master			0.45	μs
Acknowledge setup time	Tsuac(SD)	8-th SCL falling edge, Slave			0.45	μs
Acknowledge hold time	Thdac(SD)	9-th SCL falling edge, Slave			0.45	μs
EEPROM						
Slave address	SA	Factory default		50		hex
I <sup>2</sup> C clock frequency	SCLEEPROM	EEPROM			400	kHz
Data retention		T <sub>a</sub> = +85°C	200			years
Erase/write cycles		T <sub>a</sub> = +25°C	1M			Times
Erase/write cycles		T <sub>a</sub> = +125°C	100K			Times
Erase cell time	T_erase				5	ms
Write cell time	T_write				5	ms

Table 4 Electrical specification parameters of MLX90620



## 6 Block diagram

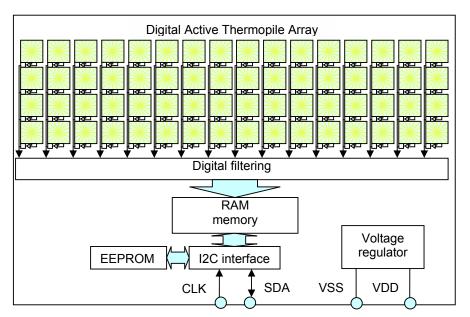


Figure 2 Block diagram

The device consists of 2 chips packaged in a single TO-39 package

- IR array and processing electronics
- EEPROM chip



#### 7 Principle of operation

The output of all IR sensors and absolute temperature sensors is scanned according to the programmed refresh rate. Using their output data, as well as calibration constants written in EEPROM, the absolute chip temperature and object temperature, 'seen' by each pixel can be calculated. For this goal several sequential calculations must be done according to the Figure 3 Operation block diagram

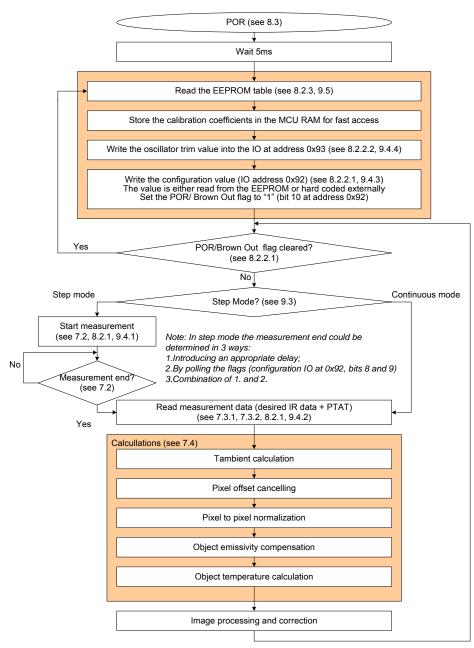


Figure 3 Operation block diagram



#### 7.1 Initialization

After the POR is released the external MCU must execute an initialization procedure. This procedure must start at least 5ms after POR release.

- Read the whole EEPROM (see Figure 4). For maximum speed performance Melexis recommends that the whole calibration data is stored into the client MCU RAM. However it is possible to read the calibration data from the EEPROM only when needed. This will result in increased time for temperature calculation i.e. low refresh rate.




Figure 4 Whole EEPROM dump (SA = 0x50, command = 0x00)

- Store the EEPROM content into customer MCU RAM This step could be omitted resulting in more data processing time because calibration data needs to be reread for each calculation
- Write the oscillator trimming value (extracted from EEPROM content at address 0xF7) into the corresponding register (0x93).




Figure 5 Write oscillator trimming (SA = 0x60, command = 0x04)

Write device configuration value. In EEPROM addresses (0xF5 and 0xF6) Melexis provides a typical value of the configuration register (0x740E). So it is up to the user to copy that value or hardcode a new value to be loaded into the configuration register. If the EEPROM value is to be used the 16 bits are combined as follows:

For example: if EEPROM 0xF5 = 0x0E and 0xF6 = 0x74, the Configuration register value is:

Configuration  $\_register \_value = \{0xF6: 0xF5\} = 0x740E$ 




Figure 6 Write configuration register (SA = 0x60, command = 0x03)

NOTE: The user must ensure that the bit 10 (POR or Brown-out flag) in Configuration register is set to "1" by the MD. Furthermore this bit must be checked regularly and if it is cleared that would mean that the device has been reset and the initialization procedure must be redone.

The default configuration is:

- IR refresh rate = 1Hz;
- T<sub>a</sub> refresh rate = 2Hz;
- Continuous measurement mode;
- Normal mode (no sleep);
- I<sup>2</sup>C FM+ mode enabled (maximum bit transfer up to 1000 Kbit/s);
- ADC low reference enabled;



#### 7.1.1 Reading configuration

#### 7.1.1.1 Reading configuration register




Figure 7 Reading configuration register (SA = 0x60, command = 0x02,

Start address = 0x92, Address step = 0x00, Number of reads = 0x01)

#### 7.1.1.2 Reading oscillator trimming register




Figure 8 Reading configuration register (SA = 0x60, command = 0x02,

Start address = 0x93, Address step = 0x00, Number of reads = 0x01)

#### 7.2 Measuring

After the initialization procedure is done depending on the selected measurement mode (bit 6 in the configuration register) there are two possible routines:

- continuous mode
  - wait for valid data (depending on chosen refresh rates IR and PTAT)
- Step mode
  - Send start measurement command




Figure 9 Start measurement command (SA = 0x60, command = 0x0801)

- Wait until measurement is finished. Detecting a measurement finish can be achieved by:
  - Wait for  $t = \frac{1}{FpS_{TO}}$  or  $t = \frac{1}{FpS_{TA}}$  whichever is bigger from the moment of

starting the measurement (write to the configuration I/O)

- By polling the appropriate flags in the configuration IO at 0x92, bits 8 and 9. (See8.2.2)
- A combination of both.



Datasheet IR16x4

March 20, 2012

#### 7.3 Read measurement data

#### 7.3.1 PTAT data read

Absolute ambient temperature data of the device itself (package temperature) can be read by using following command:




Figure 10 PTAT (SA = 0x60, command = 0x02, Start address = 0x90,

Address step = 0x00, Number of reads = 0x01) measurement result read

PTAT \_ data = { PTAT \_ data \_ MSbyte: PTAT \_ data \_ LSbyte}

#### 7.3.2 IR data read

There are four options available for reading IR data: (See section 8.2.1 for an overview of the RAM addresses).

Whole frame read (Melexis recommends the whole frame read for maximum refresh rate)

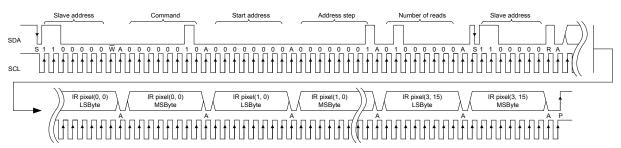


Figure 11 Whole frame (SA = 0x60, command = 0x02, Start address = 0x00, Address step = 0x01, Number of reads = 0x40) measurement result read

Single column read

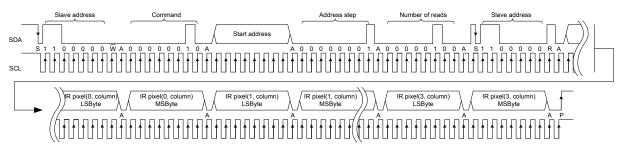


Figure 12 Single column (SA = 0x60, command = 0x02, Start address = 0x00...0x3C (step 0x04), Address step = 0x01, Number of reads = 0x04) measurement result read





#### - Single line read

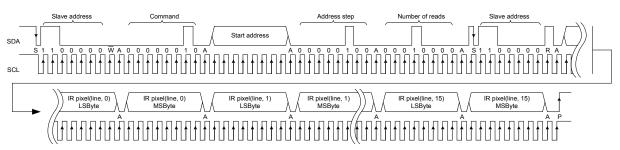


Figure 13 Single line (SA = 0x60, command = 0x02, Start address = 0x00...0x03 (step 0x01), Address step = 0x04, Number of reads = 0x10) measurement result read

#### Single pixel read




Figure 14 Single pixel (SA = 0x60, command = 0x02, Start address = 0x00...0x3F, Address step = 0x00, Number of reads = 0x01) measurement result read

#### Compensation pixel read




Figure 15 Compensation pixel (SA = 0x60, command = 0x02, Start address = 0x91, Address step = 0x00, Number of reads = 0x01) measurement result read The 16bit data for each pixel is:

$$IR(i, j)$$
 \_  $data = \{IR(i, j)$  \_  $data$  \_  $MSbyte: IR(i, j)$  \_  $data$  \_  $LSbyte\}$ 





#### 7.4 Calculation

#### 7.4.1 Calculation of absolute chip temperature $T_a$ (sensor temperature)

The output signal of the IR sensors is relative to the cold junction temperature. That is why we need to know the temperature of the die in order to be able to calculate the object temperature 'seen' by each pixel.

The T<sub>a</sub> can be calculated using the formula:

$$Ta = \frac{-K_{T1} + \sqrt{K_{T1}^2 - 4K_{T2}[V_{TH}(25) - PTAT\_data]}}{2K_{T2}} + 25,[^{\circ}C]$$

Constants  $V_{\it TH}$  (25),  $K_{\it T1}$  and  $K_{\it T2}$  are stored in EEPROM at following addresses as two's complement values:

EEPROM address Cell name		Stored as	Parameter	
0xDA	V <sub>TH</sub> _L	2's complement	V <sub>TH0</sub> of absolute temperature sensor	
0xDB	V <sub>TH</sub> _H	2 S Complement	V <sub>TH0</sub> or absolute temperature sensor	
0xDC	K <sub>T1</sub> _L	2's complement	K <sub>T1</sub> of absolute temperature sensor	
0xDD	K <sub>T1</sub> _H	2 S Complement		
0xDE	K <sub>T2</sub> _L	2's complement	K <sub>T2</sub> of absolute temperature sensor	
0xDF	K <sub>T2</sub> _H	2 S complement	N <sub>T2</sub> or absolute temperature sensor	

Table 5 EEPROM parameters for T<sub>a</sub> calculations

$$V_{TH}(25) = 256.V_{TH_{H}} + V_{TH_{L}}$$

$$K_{T1} = \frac{256.K_{T1\_H} + K_{T1\_L}}{2^{10}}$$

$$K_{T2} = \frac{256.K_{T2\_H} + K_{T2\_L}}{2^{20}}$$

#### 7.4.2 Example for T<sub>a</sub> calculations

Let's assume that the values in EEPROM are as follows:

EEPROM address	Cell name	Cell values (hex)
0xDA	V <sub>TH</sub> _L	0x78
0xDB	$V_{TH}H$	0x1A
0xDC	K <sub>T1</sub> _L	0x33
0xDD	K <sub>T1</sub> _H	0x5B
0xDE	K <sub>T2</sub> _L	0xCC
0xDF	K <sub>T2</sub> H	0xED

Table 6 EXAMPLE for T<sub>a</sub> calibration values





$$V_{\it TH}\left(25\right) = 256.V_{\it TH\,\_H} + V_{\it TH\,\_L} = 256.26 + 120 = 6776$$
 , decimal value

Sign check 
$$6776 < 32767 \rightarrow V_{TH}(25) = 6776$$

$$K_{T1} = \frac{256.K_{T1\_H} + K_{T1\_L}}{2^{10}} = \frac{256.91 + 51}{1024} = \frac{23347}{1024}$$

Sign check 
$$23347 < 32767 \rightarrow K_{T1} = \frac{23347}{1024} \approx 22.7998$$

$$K_{T2} = \frac{256.K_{T2\_H} + K_{T2\_L}}{2^{20}} = \frac{256.237 + 204}{1048576} = \frac{60876}{1048576}$$

Sign check 
$$60876 > 32767 \Rightarrow K_{T2} = \frac{60876 - 65536}{1048576} = \frac{-4660}{1048576} \approx -0.0044441$$

#### Let's assume that the input data is:

$$PTAT \_data = 0x1AC0 = 6848 dec$$

Thus the ambient temperature is:

$$Ta = \frac{-K_{T1} + \sqrt{K_{T1}^2 - 4K_{T2}[V_{TH}(25) - PTAT\_data]}}{2K_{T2}}$$

$$Ta \approx \frac{-22.7998 + \sqrt{519.8309 - 4(-0.0044441)[6776 - 6848]}}{-0.0088882} + 25$$

$$Ta \approx \frac{-22.7998 + \sqrt{519.8309 + 0.0177764(-72)}}{-0.0088882} + 25$$

$$Ta \approx \frac{-22.7998 + \sqrt{518.551}}{-0.0088882} + 25 \approx \frac{-22.7998 + 22.7717}{-0.0088882} + 25 \approx 3.16 + 25$$

$$Ta \approx 28.16$$
° $C$ 

#### 7.4.3 Calculation of T<sub>o</sub>

Following formula is used to calculate the temperature seen by a specific pixel in the matrix:

$$T_{O(i,j)} = \sqrt[4]{\frac{V_{IR(i,j)\_COMPENSATED}}{\alpha_{(i,j)}} + (T_a + 273.15)^4} - 273.15, [°C]$$

where:

 $V_{\mathit{IR}(i,j)\_\mathit{COMPENSATED}}$  is the parasitic free IR compensated signal as calculated in 7.4.3.1

 $lpha_{(i,j)}$  is an individual pixel sensitivity coefficient stored in EEPROM as calculated in 7.4.3.2

 $T_a$  is the ambient temperature calculated in 7.4.1

#### 7.4.3.1 Calculating VIR(I,i) COMPENSATED

#### 1. Offset compensation

$$V_{IR(i,j)\_OFF\_COMP} = V_{IR(i,j)} - \left(A_{i(i,j)} + \frac{B_{i(i,j)}}{2^{B_{i\_scale}}} \left(T_a - T_{a\_0}\right)\right)$$

Where:

 $V_{IR(i,j)}$  is an individual pixel IR\_data readout (RAM read)

 $A_{i(i,j)}$  is an individual pixel offset stored in EEPROM as two's complement value

 $B_{i(i,j)}$  is an individual pixel offset slope coefficient stored in EEPROM as two's complements value

 $B_{i\_SCALE}\,$  is a scaling coefficient for slope of IR pixels offset and is stored in the EEPROM as unsigned value

 $T_a$  is ambient temperature calculated in 7.4.2

$$T_{a=0} = 25^{\circ}C$$
 is a constant

**NOTE:** This applies to the compensation pixel as well ( $A_{CP}$  and  $B_{CP}$  while  $B_{i-SCALE}$  is the same)

#### 2. Thermal Gradient Compensation (TGC)

$$V_{IR(i,j)\_TGC\_COMP} = V_{IR(i,j)\_OFF\_COMP} - \frac{TGC}{32} \cdot V_{IR\_CP\_OFF\_COMP}$$

Where:

 $V_{\it{IR\_CP\_OFF\_COMP}}$  is offset compensated IR signal of the thermal gradient compensation pixel TGC is a coefficient stored at EEPROM address 0xD8 as two's complement value

#### 3. Emissivity compensation

$$V_{\mathit{IR}(i,j)\_\mathit{COMPENSATED}} = \frac{V_{\mathit{IR}(i,j)\_\mathit{TGC}\_\mathit{COMP}}}{\mathcal{E}}$$

Where:

arepsilon is emissivity coefficient. The scaled value is stored into EEPROM as unsigned value

$$\varepsilon = \frac{256.\varepsilon _H + \varepsilon _L}{32768}$$



#### 7.4.3.2 Calculating $\alpha_{(l,j)}$

$$\alpha_{(i,j)} = \frac{\left(256.\alpha_{0\_H} + \alpha_{0\_L}\right)}{2^{\alpha_{0\_SCALERE}}} + \frac{\Delta\alpha_{(i,j)}}{2^{\Delta\alpha_{SCALERE}}}$$

Where:

 $lpha_{_{0\_H}}$  ,  $lpha_{_{0\_L}}$  ,  $\Deltalpha_{_{(i,j)}}$  ,  $lpha_{_{0\_SCALE}}$  and  $\Deltalpha_{_{SCALE}}$  are stored in the EEPROM as unsigned values

All parameters necessary to calculate  $T_{\text{o}}$  are stored into EEPROM at following addresses:

EEPROM address	Cell name	Stored as	Parameter	
0x000x3F	$A_{i(i,j)}$	2's complement	IR pixel individual offset coefficient	
0x400x7F	$B_{i(i,j)}$	2's complement	Individual T <sub>a</sub> dependence (slope) of IR pixels offset	
0x800xBF	$\Delta lpha_{(i,j)}$	unsigned	Individual sensitivity coefficient	
0xD4	$A_{CP}$	2's complement	Compensation pixel individual offset coefficients	
0xD5	$B_{CP}$	2's complement Individual T <sub>a</sub> dependence (slope) of the compensation pixel offset		
0xD6	$lpha_{\mathit{CP}\_L}$	unsigned	Sensitivity coefficient of the compensation pixel	
0xD7	$lpha_{\scriptscriptstyle CP\_H}$		Sensitivity coefficient of the compensation pixel	
0xD8	TGC	2's complement	Thermal gradient coefficient	
0xD9	$B_{i\_SCALE}$	unsigned	Scaling coefficient for slope of IR pixels offset	
0xE0	$lpha_{0\_L}$	unsigned	Common consitivity coefficient of ID nivele	
0xE1	$lpha_{0_{-}H}$	-	Common sensitivity coefficient of IR pixels	
0xE2	$lpha_{0\_SCALE}$	unsigned	Scaling coefficient for common sensitivity	
0xE3	$\Deltalpha_{ extit{SCALE}}$	unsigned	Scaling coefficient for individual sensitivity	
0xE4	$\varepsilon_{-}L$	uncianod	Emissivity	
0xE5	$\varepsilon_{-}H$	unsigned	Emissivity	

Table 7 EEPROM parameters for  $T_{\text{o}}$  calculations



#### 7.4.4 Example for To calculations

Let's assume that we have following EEPROM data for pixel i=2, j=8:

EEPROM address	Cell name	Stored as	Cell values (hex)
0x22	$A_{i(2,8)}$	2's complement	0xD6
0x62	$B_{i(2,8)}$	2's complement	0xC1
0xA2	$\Deltalpha_{\scriptscriptstyle (2,8)}$	unsigned	0x8F
0xD4	$A_{CP}$	2's complement	0xD0
0xD5	$B_{\it CP}$	2's complement	0xCA
0xD6	$lpha_{\scriptscriptstyle CP\_L}$	unsigned	0x00
0xD7	$lpha_{\mathit{CP}_{-}\mathit{H}}$	unsigned	0x00
0xD8	TGC	2's complement	0x23
0xD9	$B_{i\_SCALE}$	unsigned	0x08
0xE0	$lpha_{0\_L}$	unsigned	0xE4
0xE1	$lpha_{0\_H}$	unsigned	0xD5
0xE2	$lpha_{0\_\mathit{SCALE}}$	unsigned	0x2A
0xE3	$\Deltalpha_{ extit{SCALE}}$	unsigned	0x21
0xE4	$\varepsilon_{-}L$	unsigned	0x99
0xE5	$\varepsilon H$	unsigned	0x79

Table 8

Let's assume that we have the following input data:

$$V_{\it CP}=0xFFD8=65496 \ , \ {\rm decimal\ value}$$
 Sign check  $65496>32767 \ \ \ \rightarrow \ V_{\it CP}=65496-65536=-40$ 

$$V_{I\!R(2,8)} = 0x0090 = 144 \, \text{, decimal value}$$
 Sign check  $144 < 32767 \, \Rightarrow V_{I\!R(2,8)} = 144$ 

$$Ta \approx 28.16$$
°C (as calculated in 7.4.2)

Reference routine for To computation:

$$A_{CP}=0xD0=208\,,$$
 decimal value 
$${\rm Sign~check~}208>127~\rightarrow~A_{CP}=208-256=-48$$

$$B_{\it CP}=0xCA=202$$
 , decimal value 
$${\rm Sign~check~202>127~ \Rightarrow }~B_{\it CP}=202-256=-54$$

# MLX90620



# 16x4 IR array

$$V_{CP\_OFF\_COMP} = V_{CP} - \left(A_{CP} + \frac{B_{CP}}{2^{B_{i\_scale}}} \left(T_a - T_{a\_0}\right)\right) = -40 - \left(-48 + \frac{-54}{2^8} \left(28.16 - 25\right)\right) \approx 8.67$$

$$A_{i(2,8)} = 0xD6 = 214$$
, decimal value

Sign check 
$$214 > 127 \rightarrow A_{i(2,8)} = 214 - 256 = -42$$

$$B_{i(2,8)} = 0xC1 = 193$$
, decimal value

Sign check 
$$193 > 127 \rightarrow B_{i(2.8)} = 193 - 256 = -63$$

$$V_{IR(2,8)\_OFF\_COMP} = V_{IR(2,8)} - \left(A_{i(2,8)} + \frac{B_{i(2,8)}}{2^{b_{i\_scale}}} \left(T_a - T_{a\_0}\right)\right) = 144 - \left(-42 + \frac{-63}{2^8} \left(28.16 - 25\right)\right) \approx 186.78$$

$$TGC = 0x23 = 35$$
, decimal value

Sign check 
$$35 < 127 \rightarrow TGC = 35$$

$$V_{IR(i,j)\_TGC\_COMP} = V_{IR(i,j)\_OFF\_COMP} - \frac{TGC}{32}.V_{IR\_CP\_OFF\_COMP} = 186.78 - \frac{35}{32}.8.67 \approx 177.30$$

$$\varepsilon = \frac{256.\varepsilon - H + \varepsilon - L}{32768} = \frac{256.121 + 153}{32768} = \frac{31129}{32768} \approx 0.949981$$

$$V_{IR(i,j)\_COMPENSATED} = \frac{V_{IR(i,j)\_TGC\_COMP}}{\varepsilon} = \frac{177.30}{0.949981} \approx 186.63$$

$$\alpha_{(2,8)} = \frac{\left(256.\alpha_{0\_H} + \alpha_{0\_L}\right)}{2^{\alpha_{0\_SCALERE}}} + \frac{\Delta\alpha_{(2,8)}}{2^{\Delta\alpha_{SCALERE}}} = \frac{\left(256.213 + 228\right)}{2^{42}} + \frac{143}{2^{33}} \approx 2.9097.10^{-8}$$

$$T_{O(2,8)} = \sqrt[4]{\frac{V_{IR(2,8)\_COMPENSATED}}{\alpha_{(2,8)}} + (T_a + 273.15)^4} - 273.15$$

$$T_{O(2,8)} = \sqrt[4]{\frac{186.63}{2.9097.10^{-8}} + (28.16 + 273.15)^4} - 273.15 \approx 74.79^{\circ}C$$





### 8 Detailed description, Block description

#### 8.1 Pixel position

The array consists of 64 IR sensors (also called pixels). Each pixel is identified with its row and column position as Pix(i,j) where i is its row number (from 0 to 3) and j is its column number (from 0 to 15)

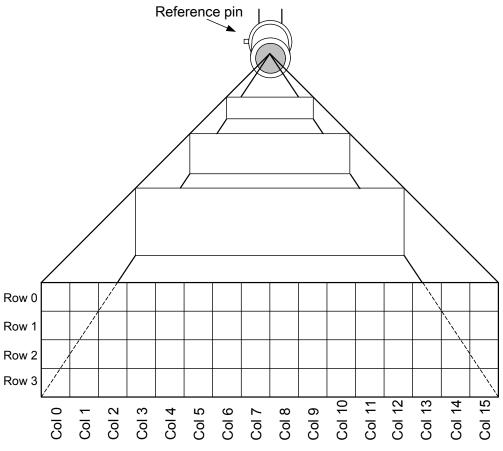


Figure 16 Pixel position in the whole FOV



#### 8.2 MLX90620 address map

The MLX90620 address map is shown below:

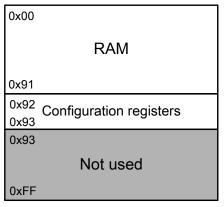


Figure 17 Address map

#### 8.2.1 RAM

The on chip 146x16 RAM is accessible for reading via  $I^2C$ . The RAM is used for storing the results of measurements of pixels and  $T_a$  sensor and is distributed as follows:

- 64 words for IR sensors. The data is in 2's complement format (see 7.3.2)
- 1 word for measurement result of PTAT sensor. The data is 16 bit without sign. (see 7.3.1)

The memory map of the RAM is shown below:

RAM Address	RAM variable description
0x00	IR sensor (0,0) result
0x01	IR sensor (1,0) result
0x02	IR sensor (2,0) result
0x03	IR sensor (3,0) result
0x04	IR sensor (0,1) result
0x05	IR sensor (1,1) result
0x3B	IR sensor (3,14) result
0x3C	IR sensor (0,15) result
0x3D	IR sensor (1,15) result
0x3E	IR sensor (2,15) result
0x3F	IR sensor (3,15) result
0X40	NA
0X8F	NA
0x90	PTAT sensor result
0x91	TGC sensor result

Table 9: Result address map

For IR sensors results, the addressing can be summarized: IR(x,y) is on address:

IR(x, y) address = x + 4.y



#### 8.2.2 Internal registers

#### 8.2.2.1 Configuration register (0x92)

The configuration register defines the chip operating modes. It can be read and written by the  $I^2C$  MD.

15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0	Configuration register bit meaning (0x92)
												0	0	0	0	- IR Refresh rate = 512Hz
												0	0	0	1	- IR Refresh rate = 512Hz
												0	0	1	0	- IR Refresh rate = 512Hz
												0	0	1	1	- IR Refresh rate = 512Hz
												0	1	0	0	- IR Refresh rate = 512Hz
												0	1	0	1	- IR Refresh rate = 512Hz
												0	1	1	0	- IR Refresh rate = 256Hz
												0	1	1	1	- IR Refresh rate = 128Hz
												1	0	0	0	- IR Refresh rate = 64Hz
												1	0	0	1	- IR Refresh rate = 32Hz
												1	0	1	0	- IR Refresh rate = 16Hz
												1	0	1	1	- IR Refresh rate = 8Hz
												1	1	0	0	- IR Refresh rate = 4Hz
												1	1	0	1	- IR Refresh rate = 2Hz
												1	1	1	0	- IR Refresh rate = 1Hz (default)
												1	1	1	1	- IR Refresh rate = 0.5Hz
										х	Х	NA				
									0	- Co	ntinu	ous	meas	surer	nen	t mode (default)
									1	- Ste	ep m	easu	reme	nt m	ode	
								0	- No	rmal	ope	ratior	n mod	de (d	efau	ult)
								1	- Sle	ep n	node	:				
							0	- No	Tar	neas	urer	nent	runni	ng (f	lag	only can not be written)
	1 - Ta measurement running (flag only can not be written)															
						0	- No	IR n	neas	urem	ent	runni	ng (fl	ag o	nly d	can not be written)
						1	- IR	mea	sure	ment	runi	ning (	flag	only	can	not be written)
					0	- PC	R or	Brov	vn-o	ut oc	curre	ed - N	leed	to re	load	d Configuration register
											_	•			_	uration register (default)
										,						up to 1000 kbit/s)
										ed (n	nax t	oit tra	nsfe	rate	s u	p to 400 kbit/s) (default)
		0	0			esh ı										
		0 1 - Ta Refresh rate = 8Hz														
	1 0 - Ta Refresh rate = 4Hz															
	1 1 - Ta Refresh rate = 2Hz (default)															
	0 - ADC high reference enabled															
V	1 - ADC low reference enabled (default)															
Х	NA															

Table 10: Configuration register bit meaning

#### 8.2.2.2 Trimming register (0x93)

It can be read and written by the I<sup>2</sup>C MD.

15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0	Trimming register bit meaning (0x93)
											7 t	oit va	lue			- Oscillator trim value
х	Х	х	х	х	Х	х	Х	Х	NA							

Table 11: Oscillator trimming bit meaning



#### 8.2.3 **EEPROM**

A 2kbit, organized as 256x8 EEPROM is built in the MIx90620. The EEPROM has a separate I2C address SA = 0x50 and is used to store the calibration constants and the configuration of the device.

Address	0	1	2	3	4	5	6	7	
00	Ai (0,0)	Ai (1,0)	Ai (2,0)	Ai (3,0)	Ai (0,1)	Ai (1,1)	Ai (2,1)	Ai (3,1)	
80									
10									
18			Ai - IR	pixels individu	ial offset coef	ficients			
20			74 114	pixele illaiviat	dai onoci ooci	noicitio			
28									
30									
38	Ai (0,14)	Ai (1,14)	Ai (2,14)	Ai (3,14) Bi (3,0)	Ai (0,15)	Ai (1,15)	Ai (2,15) Bi (2,1)	Ai (3,15) Bi (3,1)	
40	Bi (0,0)	Bi (1,0)	Bi (2,0)	Bi (3,0)	Bi (0,1)	Bi (1,1)	Bi (2,1)	Bi (3,1)	
48					••				
50									
58 60		В	i - Individual	Ta dependen	ce (slope) of	IR pixels offse	et		
68									
70									
78	Bi (0,14)	Bi (1.14)	Bi (2,14)	Bi (3,14)	 Bi (0.15)	Bi (1,15)	Bi (2,15)	Bi (3,15)	
80	Δα (0,0)	Δα (1,0)	Δα (2,0)	Δα (3,0)	Δα (0,1)	Δα (1,1)	Δα (2,1)	Δα (3,1)	
88	( , ,	( , ,	( , ,			( , ,	( , ,	( , ,	
90									
98			Inc	dividual aanai	tivity coefficie	oto			
A0			IIIC	dividual sensi	livity coefficie	nis			
A8									
B0									
B8	Δα (0,14)	Δα (1,14)	Δα (2,14)	Δα (3,14)	Δα (0,15)	Δα (1,15)	Δα (2,15)	Δα (3,15)	
C0				MELEXIS	reserved				
C8									
D0		MELEXIS	reserved		Compensation pixel coefficients				
D8	TGC	Scale offset			PTAT				
E0	Common sensitivity coefficients Emissivity KsTa								
E8	MELEXIS reserved								
F0	MELEXIS reserved Config register OSC trim Chip ID								
F8				Chi	סו ק				

Table 12: EEPROM map

Detailed descriptions of some of the EEPROM addresses are described here after:

D7	D6	D5	D4	D3	D2	D1	D0	EEPROM cell meaning
					MELEXIS	reserved		- MELEXIS reserved
			A <sub>CP</sub>	- Compens	ation pixel in	dividial offse	et	
		B <sub>CP</sub>	- Individual	Ta depende	ence (slope)	of the comp	ensation pix	tel offset
$\Delta\alpha_{CP}$ H	$\Delta \alpha_{CP}$ L	- Sensitivity	coefficient	of the comp	ensation pixe	el		

Table 13: D0...D7 EEPROM cell meaning

DF	DE	DD	DC	DB	DA	D9	D8	EEPROM cell meaning
							TGC	- Thermal Gradien Coefficient
						Bi <sub>scale</sub>	- Scaling co	peficient of slope of IR pixels offset
				$V_{th}$ H	$V_{th}_L$	- Vth0 of al	osolute temp	peratire sensor
		K <sub>T1</sub> _H	$K_{T1}_L$	- K <sub>T1</sub> of abso	olute tempe	ratire senso	or	
K <sub>T2</sub> H	K <sub>T2</sub> _L	- Kt2 of abs	olute tempe	ratire sensor				

Table 14: DF...D8 EEPROM cell meaning








Table 15: E7...E0 EEPROM cell meaning

F7	F6	F5	F4	F3	F2	F1	F0	EEPROM cell meaning			
				ME	LEXIS rese	rved	- MELEXIS reserved				
	CFG_H	CFG_L	- Config reg	gister value							
OSC_trim	OSC_trim - Oscillator trimming value										

Table 16: F7...F0 EEPROM cell meaning

#### 8.3 POR

The Power On Reset (POR) is connected to the Vdd supply. The on-chip POR circuit provides an active level of the POR signal when the Vdd voltage rises above approximately 0.5V and holds the entire MLX90620 in reset until the Vdd is higher than 2.4V. The device will start approximately 5 ms after the POR release.

#### 8.4 ESD

ESD, 2KV Human Body Model



#### 9 Communication protocol

The device supports Fast Mode Plus  $I^2C$  FM+ (IR array only up to 1Mbps) and will work in slave mode only.

The master device is providing the clock signal (SCL) for the communication. The data line SDA is bidirectional and is driven by the master or the slave depending on the command. The selection of the SDA occupant is done according to the  $I^2C$  specification. As the SDA is an open-drain IO, '0' is transmitted by forcing the line 'LOW' and a '1' just by releasing it. During data transfer, the data line could be changed only while SCL is low. Other wise, it would be interpreted as a start/stop condition

#### 9.1 Communication pins

There are two communication pins SCL and SDA. SCL is an input only for the MLX90620 while the SDA pin is a bidirectional one. The SDA line should be wired in an open-drain configuration.

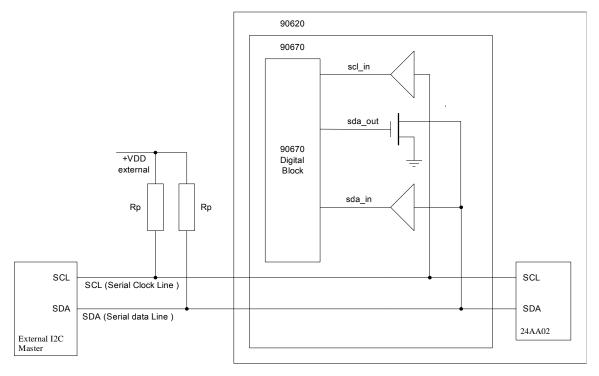


Figure 18 Communication pin diagram

#### 9.2 Low level communication protocol

#### 9.2.1 Start / Stop condition

Each communication session is initiated by a START condition and ends with a STOP condition. A START condition is initiated by a HIGH to LOW transition of the SDA while a STOP is generated by a LOW to HIGH transition. Both changes must be done while the SCL is HIGH (see the figure)

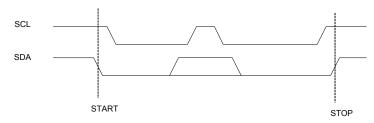


Figure 19: Start / Stop conditions of I<sup>2</sup>C

#### 9.2.2 Device addressing

The master is addressing the slave device by sending an 7-bit slave address after the START condition. The first seven bits are dedicated for the address and the 8<sup>th</sup> is Read/Write (R/W) bit. This bit indicates the direction of the transfer:

- Read (HIGH) means that the master will read the data from the slave
- Write (LOW) means that the master will send data to the slave

MLX90620 is responding to 2 different slave addresses:




Figure 20: I<sup>2</sup>C addresses

#### 9.2.3 Acknowledge

During the 9<sup>th</sup> lock following every byte transfer the transmitter releases the SDA line. The receiver acknowledges (ACK) receiving the byte by pulling SDA line to low or does not acknowledge (NoACK) by letting the SDA 'HIGH'.

#### 9.2.4 Low level communication operation

The low level operation communication is based on 8 bits (1byte) transmissions. This includes start/stop event, acknowledgement and errors detection.




Figure 21: I<sup>2</sup>C communication





#### 9.3 Device modes

The device can operate in following modes:

- Normal mode
- Step mode

#### 9.3.1 Normal mode

In this mode the measurements are constantly running. Depending on the selected frame rate Fps in ConfReg, the data for IR pixels and  $T_a$  will be updated in the RAM each 1/Fps seconds. In this mode the external microcontroller has full access to the internal registers and memories of the device (both for 90670 and EEPROM chip).

#### 9.3.2 Step mode

This mode is foreseen for single measurements triggered by the external device (microcontroller). Entering this mode is possible by writing the appropriate code in ConfReg. A measurement is triggered by sending the command StartMeas. On detecting the command, the MLX90620 will start the measurements immediately after the I<sup>2</sup>C session is finished (STOP condition detected). The measurement time is 1/Fps and can be selected in 2 possible ways:

 The already programmed Fps parameter in ConfReg can be used and the measurement (integration) time will take 1/Fps

While the Step mode measurement is ongoing all 'start new measurement in step mode' commands will be acknowledged but not executed. All other valid commands are executed accordingly. A flag bit in Configuration register (bit 0x09) is dedicated in order to be able to check whenever the measurement is done.

#### 9.4 Communication to IR array

#### 9.4.1 Start measurement command

Opcode - 0x01 (LSByte), 0x08 (MSByte).

This command is used to start measurement cycle in step mode.

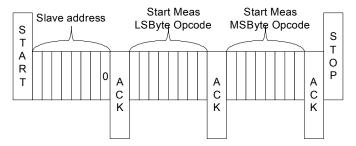


Figure 22: Start measurement command structure

#### 9.4.2 Read command

Opcode - 0x02.

The read command is used to read measurement, configuration and other data from the chip to the external master.

The read command has the following parameters:

- Start address 8 bits. Address in the chip address space (0 to 255). It is the address of the first word read.
- Address step 8 bits. On every read word the next address is formed by adding the address step to the current address.
- Number of reads 8 bits. Number of the words to be read.

Different combinations are possible in order to read all, one line, one column, one exact pixel of the IR or  $T_a$  sensors. They are summarized in the table below:

Sensors read	Start address	Address step	Number of reads
All IR	0x00	0x01	0x40
One line IR(i)	i	0x04	0x10
One column IR(j)	j*0x04	0x01	0x04
One pixel IR(i,j)	I + j*0x04	0x00	0x01

Table 17 RAM readout options




Figure 23: RAM readout command structure



#### 9.4.3 Write configuration register command

Opcode - 0x03.

This command is used to set the configuration register (16bits) value – all configuration settings. Each data byte is transmitted in two stages:

- First stage → Data byte 0x55
- Second stage → Data byte

This way of transmitting the data is done in order to have a simple error check.

The chip adds 0x55 to the first byte and compares the result with the second one. If both match the configuration register is updated.

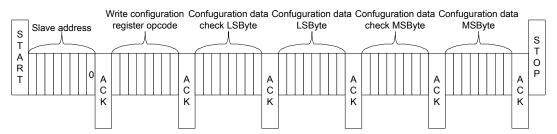


Figure 24: Configuration register update command structure

#### 9.4.4 Write trimming command

Opcode - 0x04.

This command is used to set the oscillator trimming register (16bits) value. Each data byte is transmitted in two stages:

- First stage → Data byte 0xAA
- Second stage → Data byte

This way of transmitting the data is done in order to have a simple error check.

The chip adds 0xAA to the first byte and compares the result with the second one. If both match the oscillator trimming register is updated.

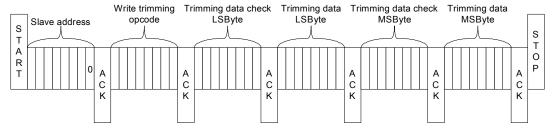


Figure 25: Oscillator trimming register update command structure





#### 9.5 Communication to EEPROM

See datasheet of 24AA02. This can be found at <a href="http://www.melexis.com/Assets/Datasheet-MLX90620-EEPROM-6088.aspx">http://www.melexis.com/Assets/Datasheet-MLX90620-EEPROM-6088.aspx</a>



#### 10 Performance Graphs

#### 10.1 Temperature accuracy of the MLX90620

*All accuracy specifications apply under settled isothermal conditions only.* Furthermore, the accuracy is only valid if the object fills the FOV of the sensor completely.

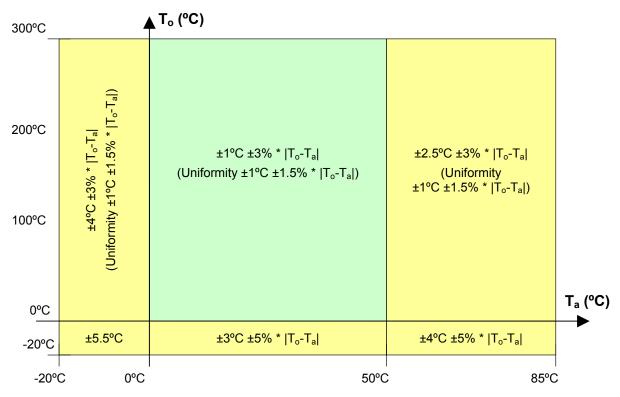


Figure 26: Absolute temperature accuracy for the central four pixels

**NOTE**: The accuracy is specified for the four central pixels. The accuracy of the rest of the pixels is according to the uniformity statement

**NOTE**: For certain combinations of Tambient and Tobject, there can be an additional measurement deviation of  $\pm$  3°C for object temperatures around room temperature, lowering to 1°C for object temperatures around 200°C. This higher deviation occurs in limited, localized temperature regions.

All accuracy specifications apply under settled isothermal conditions only.



#### 10.2 Field Of View (FOV)

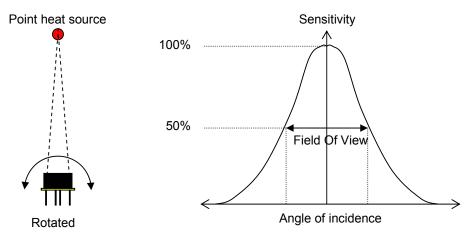


Figure 27: Field Of View measurement

The specified FOV is calculated for the wider direction, in this case for the 16 pixels. Angular alignment must be 5% of specified FOV and will be valid for both directions. For example for the 60 deg FOV in wider direction will come with 16.4 deg in shorter direction.

FOV	X direction	Y direction
100	Тур	Тур
Wide	60	16.4
Medium	40	10.4

Table 18 Available FOV options





#### 11 Applications Information

#### 11.1 Use of the MLX90620 thermometer in SMBus configuration

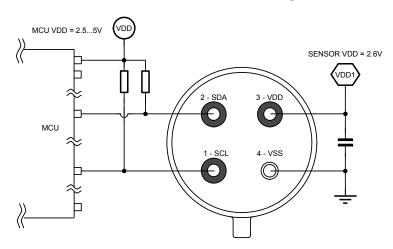


Figure 28: MLX90620 SMBus connection

Figure 28 shows the connection of a MLX90620 to a SMBus with 3.3V power supply. The MLX90620 has diode clamps SDA/SCL to Vdd so it is necessary to provide MLX90620 with power in order not to load the SMBus lines.

### 12 Application Comments

Significant **contamination** at the optical input side (sensor filter) might cause unknown additional filtering/distortion of the optical signal and therefore result in unspecified errors.

IR sensors are inherently susceptible to errors caused by **thermal gradients**. There are physical reasons for these phenomena and, in spite of the careful design of the MLX90620xxx, it is recommended not to subject the MLX90620 to heat transfer and especially transient conditions.

The MLX90620 is designed and calibrated to operate as a non contact thermometer in **settled conditions**. Using the thermometer in a very different way will result in unknown results.

Capacitive loading on a I<sup>2</sup>C can degrade the communication. Some improvement is possible with use of current sources compared to resistors in pull-up circuitry. Further improvement is possible with specialized commercially available bus accelerators. With the MLX90620 additional improvement is possible by increasing the pull-up current (decreasing the pull-up resistor values). Input levels for I<sup>2</sup>C compatible mode have higher overall tolerance than the I<sup>2</sup>C specification, but the output low level is rather low even with the high-power I<sup>2</sup>C specification for pull-up currents. Another option might be to go for a slower communication (clock speed), as the MLX90620 implements Schmitt triggers on its inputs in I<sup>2</sup>C compatible mode and is therefore not really sensitive to rise time of the bus (the rise time is more likely to be an issue than the fall time, as far as the I<sup>2</sup>C systems are open drain with pull-up).

**Power dissipation** within the package may affect performance in two ways: by heating the "ambient" sensitive element significantly beyond the actual ambient temperature, as well as by causing gradients over the package that will inherently cause thermal gradient over the cap



# MLX90620

# 16x4 IR array

**Power supply decoupling** capacitor is needed as with most integrated circuits. MLX90620 is a mixed-signal device with sensors, small signal analog part, digital part and I/O circuitry. In order to keep the noise low, power supply switching noise needs to be decoupled. High noise from external circuitry can also affect noise performance of the device. In many applications a 100nF SMD ceramic capacitor close to the Vdd and Vss pins would be a good choice. It should be noted that not only the trace to the Vdd pin needs to be short, but also the one to the Vss pin. Using MLX90620 with short pins improves the effect of the power supply decoupling.

Check www.melexis.com for most recent application notes about MLX90620.





# 13 Standard information regarding manufacturability of Melexis products with different soldering processes

Our products are classified and qualified regarding soldering technology, solderability and moisture sensitivity level according to following test methods:

#### Wave Soldering THD's (Through Hole Devices)

EIA/JEDEC JESD22-B106 and EN60749-15
 Resistance to soldering temperature for through-hole mounted devices

#### Iron Soldering THD's (Through Hole Devices)

EN60749-15
 Resistance to soldering temperature for through-hole mounted devices

#### Solderability THD's (Through Hole Devices)

 EIA/JEDEC JESD22-B102 and EN60749-21 Solderability

For all soldering technologies deviating from above mentioned standard conditions (regarding peak temperature, temperature gradient, temperature profile etc) additional classification and qualification tests have to be agreed upon with Melexis.

Melexis is contributing to global environmental conservation by promoting **lead free** solutions. For more information on qualifications of **RoHS** compliant products (RoHS = European directive on the Restriction Of the use of certain Hazardous Substances) please visit the quality page on our website: http://www.melexis.com/quality.aspx

The MLX90620 is RoHS compliant

#### 14 ESD Precautions

Electronic semiconductor products are sensitive to Electro Static Discharge (ESD). Always observe Electro Static Discharge control procedures whenever handling semiconductor products.



#### 15 FAQ

# When I measure aluminum and plastic parts settled at the same conditions I get significant errors on aluminum. Why?

Different materials have different **emissivity**. A typical value for aluminum (roughly polished) is 0.18 and for plastics values of 0.84...0.95 are typical. IR thermometers use the radiation flux between the sensitive element in the sensor and the object of interest, given by the equation

$$q = \varepsilon_I . \alpha_I . (T_I^4) \sigma . A_I . F_{a-b} - \varepsilon_2 . (T_2^4) \sigma . A_2$$
,

#### Where:

 $\varepsilon_1$  and  $\varepsilon_2$  are the emissivities of the two objects,

 $\alpha_1$  is the absorptivity of the sensor (in this case),

 $\sigma$  is the Stefan-Boltzmann constant,

 $A_1$  and  $A_2$  are the surface areas involved in the radiation heat transfer,

 $F_{a-b}$  is the shape factor,

 $T_1$  and  $T_2$  are known temperature of the sensor die (measured with specially integrated and calibrated element) and the object temperature that we need.

Note that these are all in Kelvin, heat exchange knows only physics.

When a body with low emissivity (such as aluminum) is involved in this heat transfer, the portion of the radiation incident to the sensor element that really comes from the object of interest decreases – and the reflected environmental IR emissions take place. (This is all for bodies with zero transparency in the IR band.) The IR thermometer is calibrated to stay within specified accuracy – but it has no way to separate the incoming IR radiation into real object and reflected environmental part. Therefore, measuring objects with low emissivity is a very sophisticated issue and infra-red measurements of such materials are a specialized field. What can be done to solve that problem? Look at paintings – for example, oil paints are likely to have emissivity of 0.85...0.95 – but keep in mind that the stability of the paint emissivity has inevitable impact on measurements.

It is also a good point to keep in mind that not everything that looks black is "black" also for IR. For example, even heavily oxidized aluminum has still emissivity as low as 0.30.

How high is enough? Not an easy question – but, in all cases the closer you need to get to the real object temperature the higher the needed emissivity will be, of course.

With the real life emissivity values the environmental IR comes into play via the reflectivity of the object (the sum of Emissivity, Reflectivity and Absorptivity gives 1.00 for any material). The larger the difference between environmental and object temperature is at given reflectivity (*with an opaque for IR material reflectivity equals 1.00 minus emissivity*) the bigger errors it produces.

# After I put the MLX90620 in the dashboard I start getting errors larger than specified in spite that the module was working properly before that. Why?

Any object present in the FOV of the module provides IR signal. It is actually possible to introduce error in the measurements if the module is attached to the dashboard with an opening that enters the FOV. In that case portion of the dashboard opening will introduce IR signal in conjunction with constraining the effective FOV and thus compromising specified accuracy. Relevant opening that takes in account the FOV is a must for accurate measurements. Note that the basic FOV specification takes 50% of IR signal as threshold (in order to define the area, where the measurements are relevant), while the entire FOV at lower level is capable of introducing lateral IR signal under many conditions.

# When a hot (cold) air stream hits my MLX90620 some error adds to the measured temperature I read. What is it?

IR sensors are inherently sensitive to difference in temperatures between the sensitive element and everything incident to that element. As a matter of fact, this element is not the sensor package, but the sensor die inside. Therefore, a thermal gradient over the sensor package will inevitably result in additional IR flux

# Melexis Microelectronic Integrated Systems

# MLX90620

# 16x4 IR array

between the sensor package and the sensor die. This is real optical signal that can not be segregated from the target IR signal and will add errors to the measured temperature.

Thermal gradients with impact of that kind are likely to appear during transient conditions. The sensor used is developed with care about sensitivity to this kind of lateral phenomena, but their nature demands some care when choosing place to use the MLX90620 in order to make them negligible.

# I measure human body temperature and I often get measurements that significantly differ from the +37°C I expect.

IR measurements are true surface temperature measurements. In many applications this means that the actual temperature measured by an IR thermometer will be temperature of the clothing and not the skin temperature. Emissivity (explained first in this section) is another issue with clothes that has to be considered. There is also the simple chance that the measured temperature is adequate – for example, in a cold winter human hand can appear at temperatures not too close to the well known +37°C.

# I consider using MLX90620AAA to measure temperature within car compartment, but I am embarrassed about the Sun light that may hit the module. Is it a significant issue?

Special care is taken to cut off the visible light spectra as well as the NIR (near IR) before it reaches the sensitive sensor die. Even more, the glass (in most cases) is not transparent to the IR radiation used by the MLX90620. Glass has temperature and really high emissivity in most cases – it is "black" for IR of interest. Overall, Sun behind a window is most likely to introduce relatively small errors. Why is it not completely eliminated after all? Even visible light partially absorbed in the filter of the sensor has some heating potential and there is no way that the sensor die will be "blind" for that heating right in front of it.



### 16 Mechanical specification

#### 16.1 Package outline

The height of the can depends on the selected FOV of the array

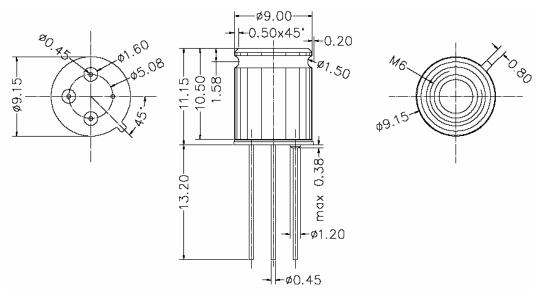


Figure 29 Mechanical drawing of Wide (60x15) FOV device

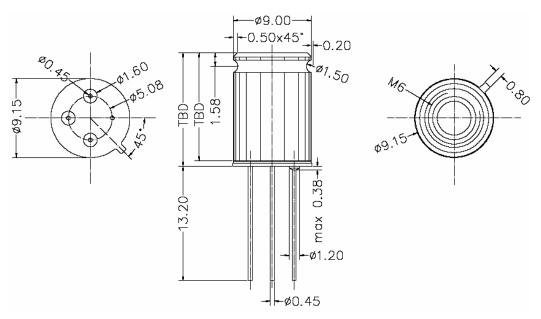


Figure 30 Mechanical drawing of Medium (40x10) FOV device





#### 17 References

[1] I<sup>2</sup>C-bus specification and user manual Rev. 03 — 19 June 2007

http://www.nxp.com/documents/user manual/UM10204.pdf

#### 18 Disclaimer

Devices sold by Melexis are covered by the warranty and patent indemnification provisions appearing in its Term of Sale. Melexis makes no warranty, express, statutory, implied, or by description regarding the information set forth herein or regarding the freedom of the described devices from patent infringement. Melexis reserves the right to change specifications and prices at any time and without notice. Therefore, prior to designing this product into a system, it is necessary to check with Melexis for current information. This product is intended for use in normal commercial applications. Applications requiring extended temperature range, unusual environmental requirements, or high reliability applications, such as military, medical life-support or life-sustaining equipment are specifically not recommended without additional processing by Melexis for each application.

The information furnished by Melexis is believed to be correct and accurate. However, Melexis shall not be liable to recipient or any third party for any damages, including but not limited to personal injury, property damage, loss of profits, loss of use, interrupt of business or indirect, special incidental or consequential damages, of any kind, in connection with or arising out of the furnishing, performance or use of the technical data herein. No obligation or liability to recipient or any third party shall arise or flow out of Melexis' rendering of technical or other services.

© 2012 Melexis NV. All rights reserved.

For the latest version of this document, go to our website at www.melexis.com

Or for additional information contact Melexis Direct:

Europe, Africa, Asia Phone: +32 1367 0495 E-mail: sales europe@melexis.com America:
Phone: +1 248 306 5400
E-mail: sales usa@melexis.com

ISO/TS 16949 and ISO14001 Certified