

#### DMP Electronics Inc.

8F, No 12, Wu-Quan 7 Rd., Wu Gu Industrial Park Wu Gu Xiang, Taipei 248, Taiwan R.O.C. TEL: 886 2 2298 0770 FAX: 886 2 2290 2335

# RoBoard RB-100 Manual V2.00

The Heart of Robotics

Jan 2009 DMP Electronics Inc

#### Copyright

The information in this manual is subject to change without notice for continuous improvement in the product. All rights are reserved. The manufacturer assumes no responsibility for any inaccuracies that may be contained in this document. And makes no commitment to update or to keep current the information contained in this manual.

No part of this manual may be reproduced, copied, translated or transmitted, in whole or in part, in any form or by any means without the prior written permission of the DMP Electronics Inc.

©Copyright 2009 DMP Electronics Inc.
Manual No. RoBo100-02 Ver.2.0D ◆ Apr. 2009

#### Trademarks Acknowledgment

Vortex86DX<sup>™</sup> is the registered trademark of DMP electronics Inc.

Other brand names or product names appearing in this document are the properties and registered trademarks of their respective owners. All names mentioned herewith are served for identification purpose only.


#### **Table of Contents**

| Chapter 1                               | 4  |
|---|----|
| Introduction                            | 4  |
| 1.1 Packing List                        | 4  |
| 1.2 Product Description                 |    |
| 1.3 Specifications                      |    |
| 1.4 Board Dimension                     |    |
| C h a p t e r 2                         | 8  |
| Installation                            |    |
| 2.1 Board Outline                       | 8  |
| 2.2 Connectors & Pin 1 Location         | 9  |
| 2.3 Connectors & Jumpers Summary        | 10 |
| 2.4 Pin Assignments                     |    |
| PWM                                     |    |
| J2: COM 3 Full Duplex TTL               | 11 |
| J3: USB 90 Deg                          |    |
| J4: USB                                 |    |
| J5: LAN                                 | 11 |
| J7: COM1 RS-232                         |    |
| J8: COM2 RS485                          | 12 |
| J9: SPI / I <sup>2</sup> C              |    |
| J11: A/D 8Ch                            |    |
| J12: Power Connector (DC-In 6V-24V)     | 13 |
| J14: LINE OUT                           |    |
| J15: MIC-IN                             |    |
| J16: COM4 Half Duplex TTL               |    |
| J17: PWM initial Pull up/down switch    |    |
| 2.5 Watchdog Timer                      |    |
| Chapter 3                               |    |
| Driver Installation                     |    |
| A. Library, Sample and development code | 17 |

# Chapter 1

#### Introduction

### 1.1 Packing List

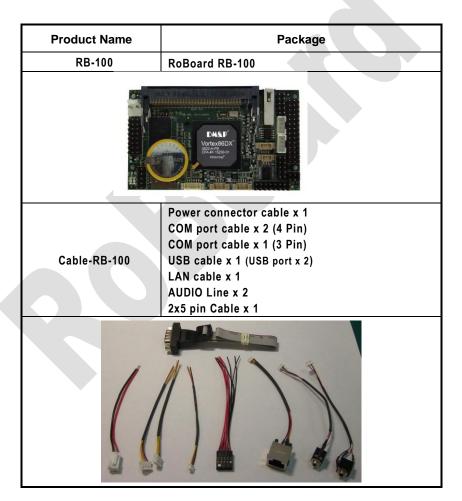

#### 1.2 Product Description

The RoBoard is the heart of any robotic system making your hobby more active and intelligent. It does not just offer control but is a complete computer system based on the Vortex86DX CPU, a 32bit x86 CPU running at 1000MHz with 256MB RAM.

The RoBoard allows users to install a Windows or Linux Operating System onto a bootable Micro-SD card offering engineers a common storage media to develop with. The RoHS compliant CPU board measures just 96mm x 50mm and accepts a voltage input range from 6V-24V DC whilst providing extremely low power consumption.


RoBoard has the rich I/O interfaces to the servo, DC motors, sensors, gyroscope, accelerometers and other devices. Also, it has build-in the PWM up to 24 Ch, GPIO, RS-232 serial, TTL serial, RS-485, USB V2.0  $\times$  3, A/D converter, SPI/I<sup>2</sup>C bus, Audio out & Mic in, 10/100M LAN and Mini PCI socket.



1.3 Specifications

|                      | RB-100  |  |  |
|----------------------|---|--|--|
| CPU                  | DM&P Vortex86DX- 1000MHz  |  |  |
| BIOS                 | AMI BIOS  |  |  |
| Memory               | 256MB DDR2 onboard  |  |  |
| ADCs                 | <ul> <li>Analog Devices AD-7918 10-bit</li> </ul>   |  |  |
| I /O Interface       | <ul> <li>Micro SD slot × 1</li> <li>USB port × 1 (USB 2.0 version)</li> </ul>   |  |  |
| Connectors           | <ul> <li>2.54 mm 3-pin box header for PWM/GPIO × 24</li> <li>2.54 mm 10-pin box header for RS-232 × 1</li> <li>2.54 mm 10-pin box header for USB × 1</li> <li>2.0 mm 4-pin header for RS-485 × 1</li> <li>2.0 mm 4-pin header for TTL serial × 1</li> <li>2.54 mm 10-pin box header for SPI &amp; I<sup>2</sup>C × 1</li> <li>2.54 mm 16-pin header for A/D × 1</li> <li>1.25 mm 3-pin wafer for TTL serial × 1</li> <li>1.25 mm 4-pin wafer for LAN × 1</li> <li>1.25 mm 4-pin wafer for MIC-in × 1</li> <li>1.25 mm 4-pin wafer for JTAG × 1</li> <li>0.8mm 124-Pin Mini PCI Card connector</li> <li>3.96 mm 2 pin for Power × 1</li> </ul> |  |  |
| Resolution           | SPI: 10Mbps to 150Mbps Half-Duplex;<br>[CPOL=0/1,CPHA=1] clock modes<br>PWM: 20ns<br>I2C: 1Kbps ~ 3.3Mbps<br>Serial: 115200bps  |  |  |
| Power<br>Consumption | +5V @ 400mA   |  |  |
| Power Input          | DC-in 6V to 24V   |  |  |
| Dimension            | 96mm × 56mm   |  |  |
| Weight               | 40g   |  |  |

#### 1.4 Board Dimension

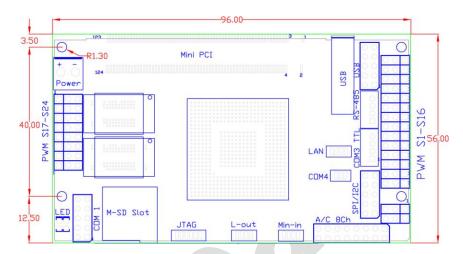




# Chapter 2


#### Installation

#### 2.1 Board Outline

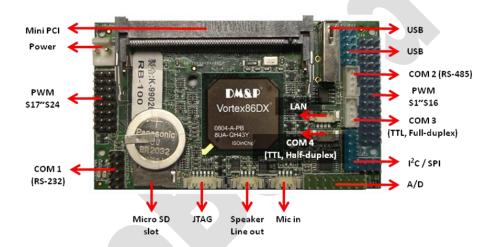


#### 2.2 Connectors & Pin 1 Location

#### **Connectors**

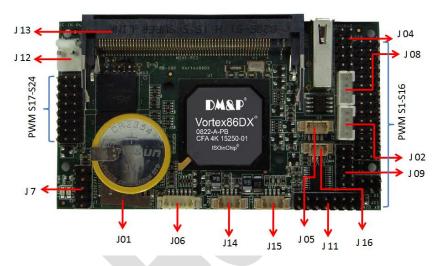

Pin 1 Location

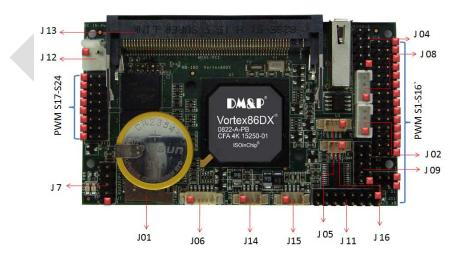

# 2.3 Connectors & Jumpers Summary

## **Summary Table**

|     | Description                     | Type of Connections     | Pin     |
|-----|---------------------------------|-------------------------|---------|
| J01 | Micro-SD Slot                   | Micro-SD slot           | 13-pin  |
| J02 | COM3 TTL                        | Box Header, 2.0mm, 4x1  | 4-pin   |
| J03 | USB                             | USB 90 Deg              | 4-pin   |
| J04 | USB x 2                         | Pin Header, 2,54mm, 5x2 | 10-Pin  |
| J05 | LAN                             | Wafer, 1.25mm, 4x1      | 4-pin   |
| J06 | JTAG                            | Wafer, 2.54mm, 6x1      | 6-pin   |
| J07 | COM1 RS-232                     | Pin Header, 2.54mm,5x2  | 10-pin  |
| J08 | COM2 RS-485                     | Box Header, 2.00mm, 4x1 | 4-pin   |
| J09 | SPI / I <sup>2</sup> C          | Pin Header, 2.54mm, 5x2 | 10-pin  |
| J11 | A/D 8Ch                         | Box Header, 2.54mm, 8x2 | 16-pin  |
| J12 | Power Connector                 | Pin Header, 3.96mm      | 2-pin   |
| J13 | Mini PCI Socket                 | Mini PCI Type III       | 124-pin |
| J14 | Line Out                        | Wafer, 1.25mm, 4x1      | 4-pin   |
| J15 | Mic In                          | Wafer, 1.25mm, 4x1      | 4-pin   |
| J16 | COM4 TTL                        | Wafer, 1.25mm, 3x1      | 3-pin   |
| J17 | PWM initial pull up/down switch | DIP switch              |         |

# 2.4 Pin Assignments

#### **PWM**

| Pin# | Signal<br>Name | Pin# | Signal<br>Name | Pin# | Signal<br>Name |
|------|----------------|------|----------------|------|----------------|
| 1    | GND            | 2    | Vxx            | 3    | GPxx           |

## J2: COM 3 Full Duplex TTL

| Pin# | Signal<br>Name | Pin# | Signal<br>Name |
|------|----------------|------|----------------|
| 1    | GND            | 2    | Vxx            |
| 3    | TXD3           | 4    | RXD3           |

#### J3: USB -- 90 Deg

| Pin# | Signal Name | Pin# | Signal Name |
|------|-------------|------|-------------|
| 1    | VCC         | 2    | LUSBD2-     |
| 3    | LUSBD2+     | 4    | GND         |

#### J4: USB

| Pin# | Signal Name | Pin# | Signal Name |
|------|-------------|------|-------------|
| 1    | VCC         | 2    | VCC         |
| 3    | LUSBD0-     | 4    | LUSBD1-     |
| 5    | LUSBD0+     | 6    | LUSBD1+     |
| 7    | GND         | 8    | GND         |
| 9    | GGND        | 10   | GGND        |



#### J5: LAN


| Pin# | Signal Name | Pin# | Signal Name |
|------|-------------|------|-------------|
| 1    | LAN-TX+     | 2    | LAN-TX-     |
| 3    | LAN-RX+     | 4    | LAN-RX-     |

#### J6: JTAG

| Pin# | Signal Name | Pin# | Signal Name |
|------|-------------|------|-------------|
| 1    | VCC         | 2    | GND         |
| 3    | TCK         | 4    | TDO         |
| 5    | TDI         | 6    | TMS         |

#### J7: COM1 RS-232

| Pin# | Signal<br>Name | Pin# | Signal<br>Name |
|------|----------------|------|----------------|
| 1    | DCD1           | 2    | RXD1           |
| 3    | TXD1           | 4    | DTR1           |
| 5    | GND            | 6    | DSR1           |
| 7    | RTS1           | 8    | CTS1           |
| 9    | RI1            | 10   | VCC(5V)        |

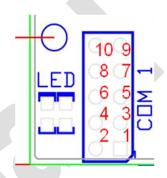


#### J8: COM2 RS485

| Pin# | # Signal F |   | Signal<br>Name |
|------|------------|---|----------------|
| 1    | GND        | 2 | Vxx            |
| 3    | RS-485+    | 4 | RS-485-        |

## J9: SPI / I<sup>2</sup>C

| Pin<br># | Signal Name             | Pin<br># | Signal Name |
|----------|-------------------------|----------|-------------|
| 1        | GND                     | 2        | VCC(5V)     |
| 3        | SPICLK<br>(CPOL1,CPHA1) | 4        | I2C0_SCL    |
| 5        | SPICLK<br>(CPOL0,CPHA1) | 6        | I2C0_SDA    |
| 7        | SPIDO                   | 8        | Reserved    |
| 9        | SPIDI                   | 10       | SPISS       |

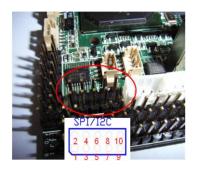

#### J11: A/D 8Ch

| Pin# | Signal<br>Name | Pin# | Signal Name |
|------|----------------|------|-------------|
| 1    | AD-VIN0        | 2    | ADGND       |
| 3    | AD-VIN1        | 4    | ADGND       |
| 5    | AD-VIN2        | 6    | ADGND       |
| 7    | AD-VIN3        | 8    | ADGND       |
| 9    | AD-VIN4        | 10   | ADGND       |
| 11   | AD-VIN5        | 12   | ADGND       |
| 13   | AD-VIN6        | 14   | ADGND       |
| 15   | AD-VIN7        | 16   | ADGND       |



A/C 8Ch 15 13 11 9 7 5 3 1 16 14 12 10 8 6 4 2

## J12: Power Connector (DC-In 6V-24V)

| Pin# | Signal Name |  |
|------|-------------|--|
| 1    | Vxx         |  |
| 2    | GND         |  |

#### J14: LINE OUT

| Pin# | Signal Name |
|------|-------------|
| 1    | LOUTR       |
| 2    | GND         |
| 3    | GND         |
| 4    | LOUTL       |

#### J15: MIC-IN


| Pin# | Signal Name |
|------|-------------|
| 1    | MICVREF     |
| 2    | GND         |
| 3    | GND         |
| 4    | MIC-IN      |

## J16: COM4 Half Duplex TTL

| Pin # | Signal<br>Name | Pin# | Signal<br>Name |
|-------|----------------|------|----------------|
| 1     | GND            | 2    | Vxx            |
| 3     | TXRX4          |      |                |

## J17: PWM initial Pull up/down switch

| Pin#  | Signal Name      | Pin # | Signal Name        |  |
|-------|------------------|-------|--------------------|--|
| Right | PWM init Pull UP | Left  | PWM init Pull Down |  |

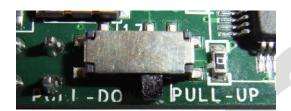

#### 2.5 Watchdog Timer

There are two watchdog timers in Vortex86DX CPU. One is compatible with M6117D watchdog timer and the other is new. The M6117D compatible watchdog timer is called WDT0 and new one is called WDT1.

We also provide DOS, Linux and WinCE example for your reference. For more technical support, please visit: <a href="http://www.dmp.com.tw/tech">http://www.dmp.com.tw/tech</a> or download the PDF file: <a href="http://www.dmp.com.tw/tech/vortex86dx/">http://www.dmp.com.tw/tech/vortex86dx/</a>

# Chapter 3

#### **Driver Installation**

#### VGA

The Vortex86DX processor also uses the external Display chip "Volari™ Z9s", which is an ultra low powered graphics chipset with total power consumption at around 1-1.5 W. It is capable in providing VGA display output up to 1600x1200. With DVO interface, developers could easily connect flat Panel to support TFT and LVDS output.

#### LAN

The Vortex86DX processor also integrates a 10/100Mbps Ethernet controller that supports both 10/100BASE-T and allows direct connection to your 10/100Mbps Ethernet based Local Area Network for full interaction with local servers, wide area networks such as the Internet.

#### **AUDIO**

The Vortex86DX processor also uses the external audio chip "CM119", which is a highly integrated single chip USB audio controller specifically for VoIP (Voice over internet protocol) application. All essential analog modules are embedded in CM119, including dual DAC and earphone driver, ADC, microphone booster, PLL, regulator, and USB transceiver.

The RB-100 provides the VGA and LAN drivers for Windows XP, Windows CE 5.0 and Windows Embedded CE 6.0R2 and Windows Embedded Standard (XPe). Please get from official website: <a href="http://www.roboard.com">http://www.roboard.com</a>

The RB-100 also supports most of the popular Linux distributions, for more detail information, please visit DMP official website: <a href="http://www.dmp.com.tw/tech/vortex86dx/">http://www.dmp.com.tw/tech/vortex86dx/</a>

## A. Library, Sample and development code

The RB-100 provides the Library, sample and development code. Please download from official website: http://www.roboard.com



#### Warranty

This product is warranted to be in good working order for a period of one year from the date of purchase. Should this product fail to be in good working order at any time during this period, we will, at our option, replace or repair it at no additional charge except as set forth in the following terms. This warranty does not apply to products damaged by misuse, modifications, accident or disaster. Vendor assumes no liability for any damages, lost profits, lost savings or any other incidental or consequential damage resulting from the use, misuse of, originality to use this product. Vendor will not be liable for any claim made by any other related party. Return authorization must be obtained from the vendor before returned merchandise will be accepted. Authorization can be obtained by calling or faxing the vendor and requesting a Return Merchandise Authorization (RMA) number. Returned goods should always be accompanied by a clear problem description.

